tapeRecorder Quick Users Guide



1) RECORD an audio file (high quality recording: 44000 Hz, 32 bit, stereo using the device microphone):

press the left RED button "REC" to start recording, press it again to stop recording. The device can record external audio events also when the device is shutdown (with display off - "battery saving" mode) or when You are using another installed app (like for example iWord PRO app, iNotePad PRO app, Pages, etc... - "take notes" mode).

2) PLAY an audio file:

as in the common tape player: play, rew, ff, stop, rew10 (it is the rapid rew), ff10 (it is the rapid ff). Instant "Play -5 seconds" to take handwrite notes of a previously recorded audio conference or University lesson (You can listen the last 5 seconds, 10 seconds, 15 seconds, etc... simply pressing "PLAY -5" button, many times if You need). The device can play a recorded audio file or a loaded iTunes song also when the device is shutdown (display off - "battery saving" mode) or when You are using another app (like in recording mode). Set "PLAY ALL" to ON to listen all the audio files stored in the archive (playlist) one after the other (for example with the display shutdown or when You are walking or running). "PLAY ALL" works also if the device display is shutdown (play a playlist using "battery saving" mode).

3) VOLUME:

The volume can be adjusted using "the circular control with red dot": to set volume You have to rotate it, dragging a finger on the screen (circular movement of the finger) to increase / decrease volume like in the commercial high fidelity audio aplifier.

